


Leader 20

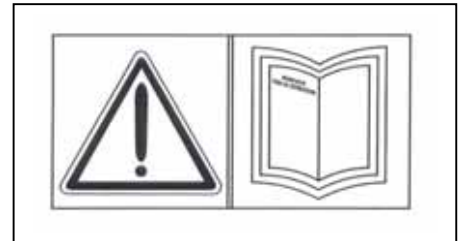

Read this operator's manual before using the machine.
Contact with rotating parts could be cause injury.
Keep clear of the machine until all parts have stopped moving.
Damaged or missing parts must be replaced with original spare parts, correctly installed before using.
When used at night or in poor visibility, illuminate the area during installation.
Store when not in use.
Grease periodically and after standstill periods.

USE INSTRUCTIONS

1. Push the machine to the desired location facing the direction that will be irrigated.


2. Place in neutral the drum. Loosen the black turbine control knob by turning counterclockwise. Now the turbine bracket can be moved down. Retighten the knob to hold the drive gear away from the drive gear.





3. Pull out the hose perpendicular the machine. Leave always a few wraps on the drum .

4. Start a few wraps by hand on the drum to insure the that first wraps are tight

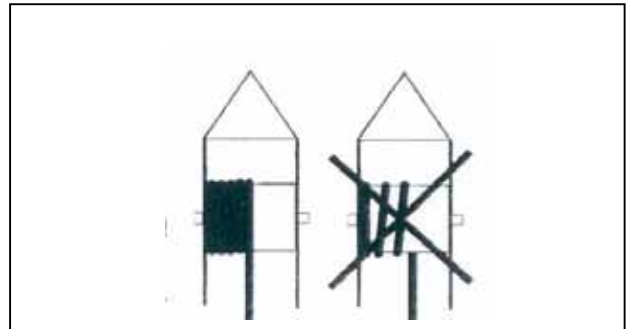

5. Re-engage the turbine gear by loosening the knob again and sliding the turbine bracket back to the drive gear.





6. Pull out the shut off valve .

7. Attach water source to the inlet joiner of the machine.



WATER PRESSURE min. 2 - max. 4 atm. / 60 psi



8. Adjust speed of cart retraction by turning the ball valve at the turbine . Turning the valve fully closed will increase retraction speed. Opening the valve will slow the retraction rate.

9. Once the speed is set, the Leader 20 will automatically roll the hose on the drum and will shut off at the end of the run utilizing the shut off valve



10. Leader 20 is ready for a new irrigation moving it easy with the handle

MAINTENANCE



Maintain thin layer on drum gear and on gears near the turbine drive.
Drain turbine prior to freezing weather.

Postadress:

TRÄDGÅRDSTEKNIK AB
Helsingborgsvägen 578, Varalöv
262 96 ÄNGELHOLM

Telefon : 0431-222 90
Bg.nr : 5743-7980
Org.nr : 556409-6120

URL:

www.tradgardsteknik.se
E-postadress:
info@tradgardsteknik.se